

MobiControl Stage

BarcodeGeneratorOperationGuide

Ver 1.00

This manual describes how to use the BarcodeGenerator tool for MobiCotrol Stage on personal computer side.

[Notes]

No part of this document may be produced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of CASIO Computer Co., Ltd. in Tokyo Japan.

Information in this document is subject to change without advance notice.

CASIO Computer Co., Ltd. makes no representations or warranties with respect to the contents or use of this manual and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose.

© 2008 CASIO Computer Co., Ltd

SOTI and MobiControl are registered trademarks of SOTI Inc. All Rights Reserved

Other company, product and service names used in this manual also may be trademarks or registered trademarks of others.

■ Work with Personal Computer side

1. Start MobiControlStage.exe [*1]

2. Register for Step 1: Project Info

- Profile Name (required)
- Platform -> **Andorid** (fixed)
- EncryptionType -> **Simple** (fixed)

After other input items fill out, Click button below.



* When you open settings file(.cp), click button below.



3. Register for Step2: Settings

Set required setting types by clicking button below.



*When you will modify or delete setting types, Click button below.



-> Select setting type from settings lists.

*About detail to describe from next pages.

[Lists of setting types]

- | | |
|-------------------------------|---|
| - APN | -> Settings of communication with carrier |
| - Device Agent Setting | -> Settings of download for MobiControl Agent |
| - Date & Time Synchronization | -> Settings of SNTP/NTP Server |
| - File Download | -> Settings of File Download |
| - Set Fixed Date | -> Settings of Date(fixed) |
| - WiFi | -> Settings of WiFi |
| - Time Zone | -> (Not use for IT-G400) |
| - WiFiConfig.apk Settings | -> (Not use for IT-G400) |


*1 MobiControl.exe(MobiconStage Barcode Generator) is supported by SOTI, and you can download it from following website for free.

<https://www.soti.net/products/mobicontrol/download/>

About detail of using this tool, refer to online-manual on site.


<https://www.soti.net/mc/help/v14.0/en/mcstage/helpindex.html>

*2 This manual is based on Version 13.2.0 build 3247.


 : Required items for settings.

- APN

-> Please confirm the content of settings to each communication carrier.

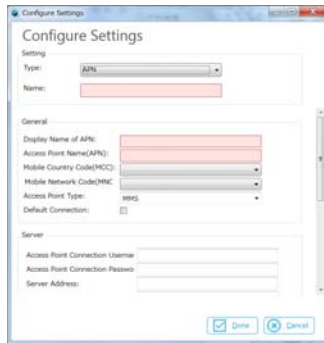


- Set Fixed Date

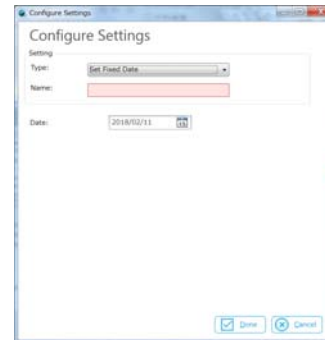


- Device Agent Setting

-> You can register ID or IP address for MobiControlServer.

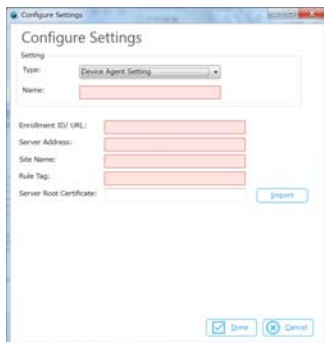


- WiFi

-> You can turn on or off WiFi feature.
And you can set settings for WiFi.

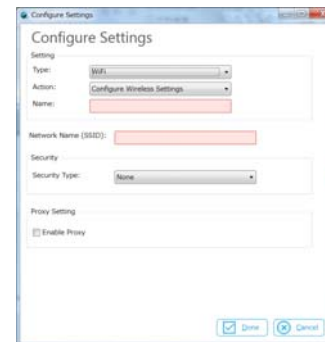


- Date & Time Synchronization

-> You can set SNTP or NTP server.

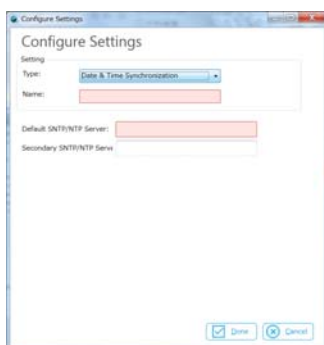

- File Download

-> You can select a download method of 'ftp' or 'http'.
But we will recommend 'http'.

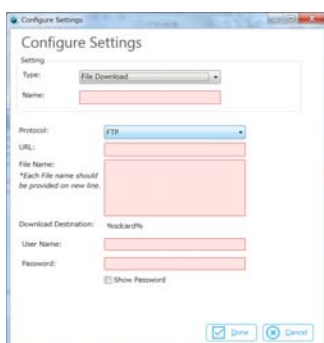

4. Save and print out about the contents of settings.



When Completed, then click following button.



*When you want to complete temporarily, click button above.

Next, Click to select 'print', 'Save As' and 'Settings'.




-> It will be printed as previewed.



-> It saves the registered settings.



-> It modifies print settings.

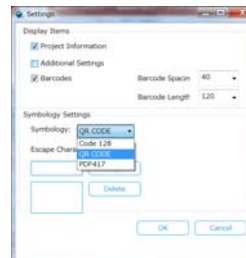

■ Work with Terminal side

1. Scan settings barcode by IT-G400.



Start MobiControl Stage on terminal, then click the QR icon. Next, scan barcode on printed.

* Please refer to [MobiControl Stage Manual for CASIO](#).